

## Add a Navigation Button that also Speaks

Follow **steps 1-7** of **Create a Button that Speaks**, then continue here:

8. Choose **Navigate** or **Visit** in the *Second Action* drop-down menu.

9. Choose the page that you want to link to from the *Navigate/Visit* drop-down menu.

10. Select **OK** to close the *Button Properties* dialog.
11. Select **View > Go to Run Mode**.
12. Select **Yes** to save your changes.

## Modify Button Appearance

1. Select **View > Go to Edit Mode** (a red box should flash around your page).
2. Double-select the button you want to edit.
3. To modify the font, colors or border of the button you selected, select the **This Button** tab and make your changes.
4. To modify the font, colors or style of all buttons on all pages, select the **All Buttons** tab and make your changes.

5. To modify the page colors and button shapes, select the **Advanced** tab and make your changes.
6. Select **OK**.
7. Select **View > Go to Run Mode**.
8. Select **Yes** to save your changes.

## Duplicate a Page

1. Select **View > Go to Edit Mode** (a red box should flash around your page).  
**Note:** If you are using the *Symbol-Base* configuration, select the page list box in the toolbar at the bottom of the touchscreen and select **Template**.
2. Select **View > Page Editing > Duplicate Page**.
3. Give your new page a name.

4. Select **OK**.
5. Modify the buttons on your new page as desired.
6. Select **View > Go to Run Mode**.
7. Select **Yes** to save your changes.

**Note:** If you are using a standard configuration, you will be prompted to enter a name for the new configuration you are creating. Enter a new name and then select **OK**. This configuration will be stored with the *User Configs*.

## Save Changes to your Configuration

To save your current configuration, select **File > Configurations > Save Config**.

**Note:** If you are saving a configuration for the first time, you will be prompted to enter a name. This new configuration will be stored with the *User Configs*.

## Modify the Pronunciation of a Word

1. Select **Tools > Pronunciation Editor**.
2. Select **Add**.
3. Type the word in the *Word* box.
4. Type the phonetic pronunciation in the *Pronunciation* box.

5. Select **Try Pronunciation** to test the pronunciation.
6. Select **OK**.
7. Select **OK** to close the *Pronunciation Editor* dialog.

## Modify the Font Size in the Editor Window

Tap the font size icon in the toolbar at the bottom of the touchscreen until you see the text size that you prefer.

## Hide or Show the Text Window

Select **View > Main Editor** to toggle the Editor Window on and off.

## Hide or Show the Menus

To hide the menus, select **View > Full Screen**. Select **OK** to close the note about exiting Full Screen mode.

**Note:** If the device is in Dedicated Device mode, you will be given the option to type a password. You may select **OK** if you don't want to include a password.

To show the menus, press the Inbox button on the front of the Palmtop device (second button from the right, with the picture of an envelope) twice quickly.

**Note:** If you assigned a password, you will have to enter it here.

## Install PC Editor, Speech, and ActiveSync (first time only)

1. Insert the Palmtop-iChat Editor CD into your computer. If a Welcome Screen does not appear in a few moments, you will need to navigate to your CD through Windows Explorer and double-click **setup.exe**.
2. Select **Next** twice to get to the *Install Options* screen. Put a checkmark next to all the components you would like to install.

3. Step through the installation by choosing **Next** at each screen and **Accept** any license agreements that are displayed.
4. Select **Finish** to complete the process.
5. Remove the CD once the installation is complete and store it in a safe place.
6. To launch the PC Editor, select **Start > Programs > DynaVox Palmtop-iChat Editor > Palmtop Editor**.

## Transfer Configurations between PC and Device

1. Turn your Palmtop device on.
2. Connect the USB sync cable to the left side of your Palmtop device.
3. Connect the other end of the USB cable to your computer. ActiveSync should launch on your computer and connect to the Palmtop automatically.
4. On your computer, select **Start > Programs > DynaVox Palmtop-iChat Editor > Palmtop Editor**.
5. In the Palmtop Editor software, select **Tools > Transfer Utilities > Transfer Files**. You will see the list of configurations available on the PC and on the Palmtop device.

- To transfer a configuration from the PC to your Palmtop device, select the configuration in the *PC Files* list on the left and select **Copy to Device**.
  - To transfer a configuration from your Palmtop device to the PC, select the configuration in the *Device Files* list on the right and select on **Copy to PC**.
6. After the transfer is complete, select **Done**.
  7. Disconnect the cable from the Palmtop and the computer.
  8. Select **File > User Configs** on your Palmtop device to find the configuration you transferred from the PC.



dynavoxtech.com  
Pittsburgh, PA 15203 USA  
412.381.4883 (Direct)  
1.866.396.2869 (US Toll-Free)

Part # 400761-A