


Stereo Amplified Listener with 3-Band Equalizer

33-1097

Thank you for purchasing your Stereo Amplified Listener from **RadioShack**. Your listener picks up sounds around you and amplifies them for easy listening. Please read this user's guide before installing, setting up, and using your new product.

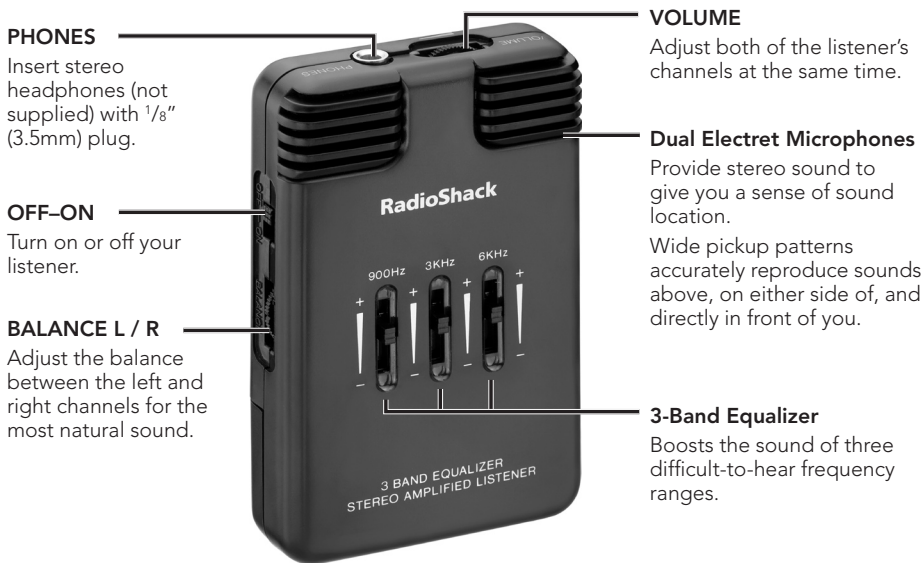

PHONES

Insert stereo headphones (not supplied) with 1/8" (3.5mm) plug.

OFF-ON

Turn on or off your listener.

BALANCE L / R

Adjust the balance between the left and right channels for the most natural sound.

VOLUME

Adjust both of the listener's channels at the same time.

Dual Electret Microphones

Provide stereo sound to give you a sense of sound location. Wide pickup patterns accurately reproduce sounds above, on either side of, and directly in front of you.

3-Band Equalizer

Boosts the sound of three difficult-to-hear frequency ranges.

Installing Batteries



- ① Slide open the battery compartment cover.
- ② Insert two AAA batteries matching polarity symbols (+/-).
- ③ Replace the cover.

Battery Notes:

- When the level of amplification becomes poor or distorted, replace the batteries.
- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and recommended type. Do not mix old and new batteries, different types (alkaline or rechargeable), or rechargeable batteries of different capacities. Doing so can damage the batteries, causing chemicals or lead leaks, fire, or explosions.
- If you do not plan to use the listener for a month, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

Using your Listener

Place the listener on a flat surface or wear it around your neck using the supplied lanyard.

- ① Turn **VOLUME** to the minimum level.
 - ② Slide all ranges of the equalizer to the (-) position.
 - ③ Slide **OFF-ON** to **ON**.
 - ④ Connect your headphones.
- Warning:** Be sure not to get the headphones and listener too close together. Doing so can cause feedback in the headphones.
- ⑤ Turn **VOLUME** to the desired listening level.

- ⑥ Turn **BALANCE** for the desired left or right balance.
- ⑦ Slide the equalizer ranges up or down to the desired frequency range.
- ⑧ Slide **OFF-ON** to **OFF** to turn off your listener.

Notes:

- This device is not intended to be used as a hearing aid. If you are hearing impaired, we recommend that you consult a hearing specialist.
- Use headphones with at least 16 ohms impedance. Using headphones with a lower impedance can reduce the volume.

What's Included

Stereo Amplified Listener
Neck Lanyard

User's Guide

Specifications

Frequency Response..... 150 Hz to 10,000 Hz
 Equalizer Bands..... 900Hz at 10dB
 3,000 Hz at 10dB
 6,000 Hz at 10dB
 Headphone Jack Impedance 16 ohms
 Sensitivity -64 dB
 (0 dB=1V/600 ohms, 1kHz)
 Maximum Output Power
 ~ 30 mW Per Channel @10% THD
 S/N Ratio..... More than 40 dB
 Power Supply..... Two AAA batteries
 Battery Life.... ~ 50 Hours (continuous use)
 Dimensions..... 3.5x2.2x0.7in (90x56x17mm)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Listening Safety

- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Set the volume to the lowest setting

before listening. Turn on the amplifier, and adjust the volume to a comfortable level.

- After you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a **RadioShack** owned store or an authorized **RadioShack** franchisee or dealer. **RadioShack** MAKES NO OTHER EXPRESS WARRANTIES. This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store in the U.S. **RadioShack** will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original

warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

RadioShack EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, **RadioShack** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RadioShack** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact **RadioShack** at:

RadioShack Customer Relations
 300 RadioShack Circle, Fort Worth, TX 76102 04/08

www.RadioShack.com



Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find a recycling location near you.