

Table of Contents

Table of Contents	1
Introduction	3
Copyrights	4
Contact and Support Information.....	4
Terminology.....	5
Getting Started	6
Setting up the Pen.....	6
The Pen Parts	7
The Pen Buttons.....	8
Selecting options	8
Button Presses	9
Regular Press	9
Long-Press.....	9
Scanning.....	9
How to Scan	9
If you are Left-handed:	9
Scanning with the Trainer.....	10
Scanning without the Trainer	11
Troubleshooting	12
Scanning Limitations.....	12
Causes of Incorrect Scanning Results	13
Solutions to Incorrect Scanning Results.....	13
Troubleshooting the Dictionary Lookup.....	13
Tutorials	14

Before Starting: Turning the Pen on.....	15
Tutorial 1 - Scanning a Single Word	16
Tutorial 2 - Scanning a Whole Line	21
Tutorial 3 - Words with Multiple Entries.....	24
The Pen Screens.....	28
Menu Options.....	30
Accessing the Main Menu	30
Selecting a Menu Option	30
Closing the Main Menu	30
The Main Menu.....	31
Scanned Words.....	31
View History	31
View Adjacent Entries	31
Reset History.....	32
Settings	32
Voice Settings	33
Lock Dict. Access.....	34
Unlock Dict. Access.....	34
Forgot your Password?.....	35
Highlight Spoken Words.....	35
Word/Line Display First.....	36
View Battery Status	36
Set Right/Left Handed.....	36
Set Contrast	36
View Serial Number	37
About	37
View Training	37

Introduction

Congratulations on your choice of the state-of-the-art *Readingpen® Basic Edition K-12* from *WizCom Technologies!* The *Readingpen® Basic Edition K-12* is a simple, easy to use, portable, discreet, device that provides immediate word support to the reader. It helps achieve a smoother and more continuous reading flow and provides quick and simple comprehension. The *Readingpen® Basic Edition K-12* lets the user read and understand independently.

Just glide the Pen over the printed English word you wish to learn. Then you can:

- Hear the word read out loud.
- View the word in large font.
- View the syllable division of the word.
- Hear the word spelled out loud.
- View the dictionary definition from *The American Heritage Dictionary*. If a word within the definition is unclear – just cross-reference from it to view its dictionary entry.
- View synonyms from *The American Heritage Thesaurus*.
- Translate the word to Spanish using the English→Spanish dictionary.
- Hear the *English* dictionary and thesaurus entries read out loud to you.
- Hear the whole line you scanned read out loud.

Copyrights

The American Heritage® Children's Dictionary by the Editors of the American Heritage® Dictionaries, published by Houghton Mifflin Company. All rights reserved.

The American Heritage® Children's Thesaurus by Paul Hellweg, published by Houghton Mifflin Company. All rights reserved.

Copyright © 2006 WizCom Technologies Ltd. All rights reserved.

WizCom Technologies Ltd. uses the Ligature OCR-on-a-Chip copyright © 1995-2006, Ligature Compression Technology copyright © 1996-2006, and Ligature reverse inflection and derivation technology copyright © 1997-2006 under license from Ligature Ltd. All rights reserved.

WizCom InfoScan™, QuickLink-Pen®, Quicktionary®, Readingpen®, WizCom SuperPen™, WizCom and Pen design are trademarks or registered trademarks of WizCom Technologies Ltd. All rights reserved.

All other brands and product names appearing here are registered trademarks or trademarks of their respective owners.

ScanSoft and the ScanSoft logo are trademarks or registered trademarks of ScanSoft Inc. used in the U.S. and/or in other countries. ScanSoft Text-to-Speech software © 2003 ScanSoft Inc. All rights reserved.

Contact and Support Information

For more information on your Pen please refer to the full **User Guide** on the CD-ROM that came in the product package.

If you still have any questions about this product or how to use it, please feel free to contact us:

- Send an E-mail to:
usa.support@wizcomtech.com
- Check our websites at:
<http://www.readingpen.net>
<http://www.wizcomtech.com>

Terminology

Pen:

The *Readingpen® Basic Edition K-12* scanning device.

Scan:

To roll the Pen over printed text.

Highlighted:

When text, numbers or graphics appear inversed on the Pen screen. For example, when text is highlighted, it appears green with a black background (instead of black text on the green background).

Select:

To ‘select’ an option means that you should scroll to the option until it appears on the screen, or until it is highlighted and then press the Pen (ENT) button in order to activate the option or enter a sub-menu or screen.

English→English Dictionary:

In this manual, this refers to “*The American Heritage Dictionary*”.

English→Spanish Dictionary:

In this manual, this refers to the dictionary used to translate English words into Spanish.

Thesaurus:

In this manual, this refers to “*The American Heritage Thesaurus*”.


Dictionary Entries and Headwords:

Dictionary entries are the set of definitions, translations, usage examples, synonyms etc. which are provided in order to teach the meaning of a single word – which is called the **Headword**.

Getting Started

Setting up the Pen


To set up the Pen, insert 2 AAA batteries as shown in the following illustration:

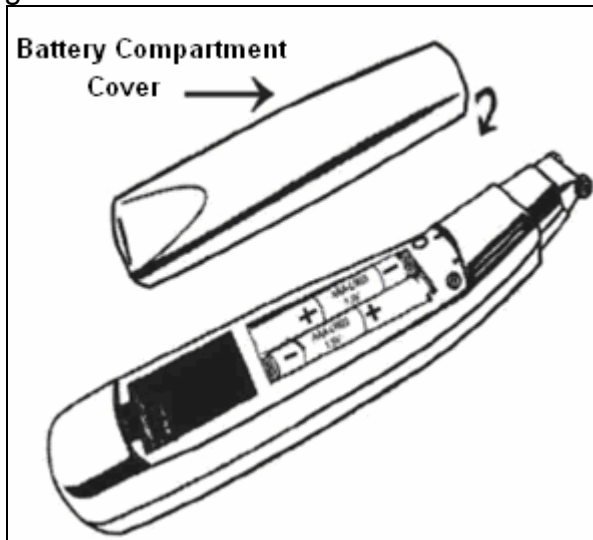


Important: please note the correct position and polarity of batteries.

The Pen Parts

The Pen contains the following parts:

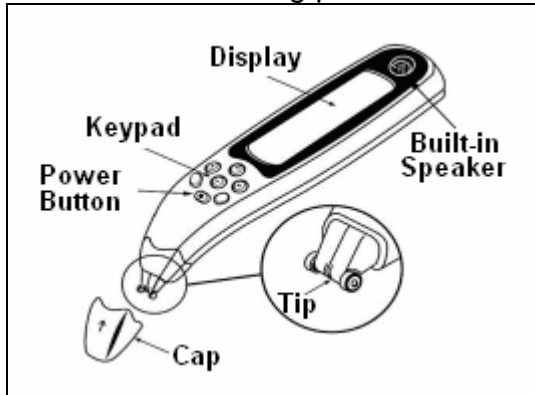

Front view

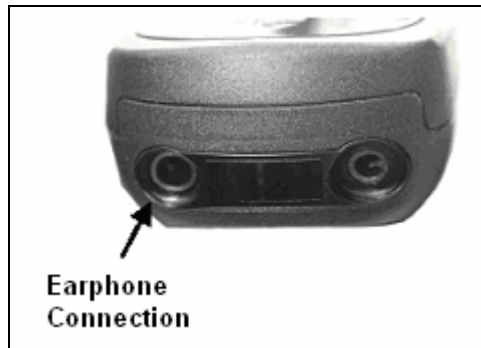


Rear view

Important: before using the earphones please lower the volume control on the earphones, to prevent ear irritation.

If your earphones do not have volume control, please access the **Set Volume** option (see page33).

The Pen Buttons

The keypad contains seven buttons for operating your Pen:

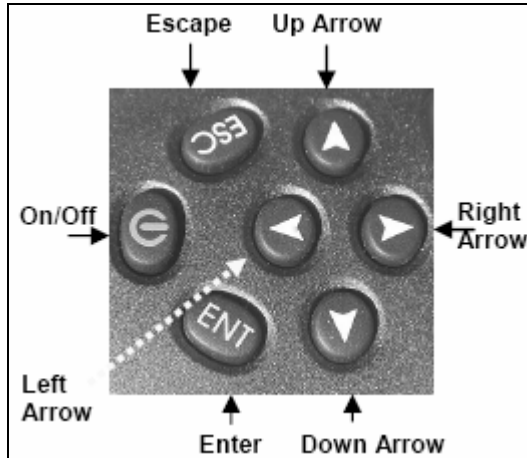

- **Power** (⏻) - used to turn the Pen on and off.
- **Enter** (ENT) - used to enter a sub-menu or screen, confirm a selection or perform an operation.
- **Escape** (ESC) - used to navigate backwards, close a screen, or cancel an operation.
- **Arrows** (◀), (▶), (▲) and (▼) - used for scrolling.

Note: Some buttons have additional functions which are explained in other sections of this document.

Selecting options

To enter a sub-menu or select a menu option:

1. Scroll through the menu or list using (▲) and (▼), until the item you want is highlighted, or until it alone appears on the screen.
2. Press (ENT).

Button Presses

There are 2 types of button presses:

Regular Press

A single short press of the button. In this manual, when you are instructed to ‘press’ a button – it means you should perform a Regular Press.

Long-Press

To long-press a button, press the button and hold it down briefly.

Scanning

Scanning means to roll the Pen over printed text. When scanning, the optical head of the Pen scans the surface and creates a bitmap copy of the scanned text. The image is then processed using OCR (Optical Character Recognition) to recreate the actual letters on the Pen.

How to Scan

Following are instructions on how to scan. To see a short scanning demonstration, please access http://www.wizcomtech.com/presentations/main_18.html.

When scanning – always be sure that:

1. The Pen is turned on.
2. The Pen cap has been removed.
3. The Pen is in scanning mode – denoted by the red blinking light at the tip of the Pen.

Note: for proper functioning confirm that the battery level is not too low (see *View Battery Status* on page 36).

If you are Left-handed:


The Pen default is set to right-handed scanning. To change it to left-handed scanning:

1. In the **Settings** menu, scroll using ▲ and ▼ until the option **Right-/Left-Handed** appears on the screen and press ENT.
2. Scroll to the mode you prefer by using ▲ or ▼.
3. Press ENT.


Scanning with the Trainer

The transparent trainer helps maintaining the correct scanning angle. Here is how to scan with it:


1. Slide the trainer on to the tip of the Pen (instead of the cap) and press firmly into place.

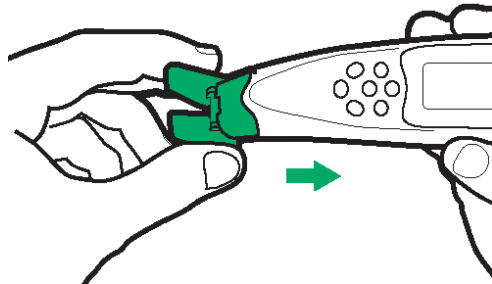

2. Place the trainer flat and steady to the right of the text you wish to scan. Notice the 90° angle that is created. This is the angle you should preserve whenever scanning, even *without* the trainer.

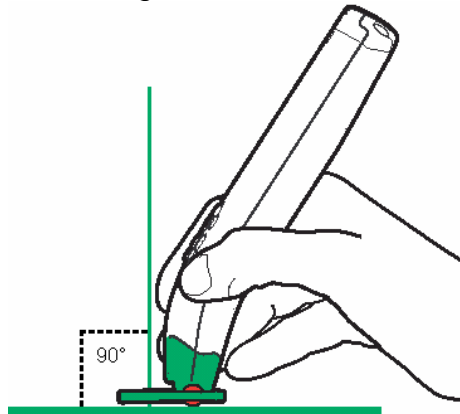


3. The text should be positioned at the center of the opening of the trainer.
4. Glide ('scan') the Pen from right to left in a straight line over the text. The area you scan should start $\frac{1}{2}$ an inch before the text, and end $\frac{1}{2}$ an inch after it. Make sure that the text always appears between the 2 arrows on the trainer, as if being "fed" into the trainer.

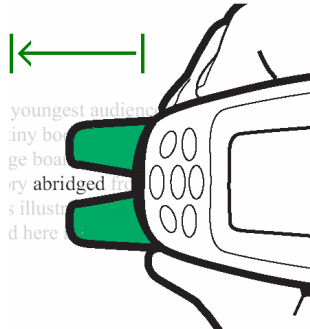

Scanning without the Trainer

Once you get accustomed to scanning, you can also scan without the trainer:

1. You can scan from right to left or from left to right.
2. Place the Pen rollers on the page, approx. $\frac{1}{2}$ an inch before the beginning of the text, and roll the Pen over the text until $\frac{1}{2}$ an inch after the text.
3. Make sure that the white guidelines at the Pen's tip pass exactly over the middle of the scanned text.
4. Maintain the 90° Pen angle you learned when scanning with the trainer.

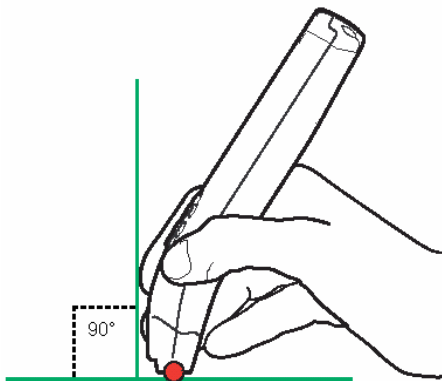

5. When rolling the Pen over the text, do not press down too hard.
6. Don't scan too quickly.

Troubleshooting

After you scan text, the Pen processes the image of what has been scanned and attempts to recognize the various letters and words from it.

The recognized words are displayed on the Pen and then you can perform any of the Pen's functions on the scanning results, such as: view words in the large font display, hear words read out loud, lookup words in the dictionaries, view the syllable division of words and hear the letters of a word spelled out loud.

If you encounter problems using the Pen, please see the following topics regarding typical problems you may encounter and how to deal with them. For more information, please refer to *Contact and Support Information* on page 4.

Scanning Limitations

The Pen allows you to scan printed English text only, 6-22 points in size, in a wide variety of fonts and in all dark colors on light contrasting backgrounds, except for red

on white. The Pen cannot scan inverse text (light text on dark background).

Causes of Incorrect Scanning Results

Sometimes the Pen may have difficulty recognizing the scanned words. Here are some examples of when this could happen:

- When the page you are scanning is dark, dirty or crumpled.
- When the printout is of low quality (for example, when the page has been photocopied).
- When holding the Pen at the wrong scanning angle.
- When scanning the text too fast (this specific situation will cause an error message ‘Scanned too fast’).
- When scanning non-English text. Your Pen can only scan English!

Solutions to Incorrect Scanning Results

- To achieve proper scanning results you must avoid the situations listed above (in the *Scanning Limitations* and *Causes of Incorrect Scanning Results* sections).
- When the scanning results are not satisfactory, try **scanning again**. You may get better results the next time!
- When failing to recognize a word, the Pen may display a list of similar words in the **Word Selection Screen**. If the list contains the word you wish to look up, simply select it from the list.

Troubleshooting the Dictionary Lookup

Even if the scanning results are identical to the text you scanned, you may encounter problems in the dictionary

lookup of the word you scanned. Here are some of the problematic situations you may encounter:

- When the word you scanned is **not included in the dictionary**, you will receive the “Word not found” message. For example, proper names, like Joe or Alice, are not included in the dictionary. You will still be able to perform other functions on such words, for example, read them out aloud and view them in the Large-Type Screen display.
- Many times, the word you scanned has **more than one** matching dictionary entry. In this case, the Pen will automatically display a list of alternative entries, prior to displaying a definition. This list (which is called a **Word List**) may contain homonyms or inflections of the scanned word. To continue and view a definition, you must first select the headword whose definition you wish to view.

Tutorials

Following are tutorials that will teach you how to use the *Readingpen® Basic Edition K-12*.

Important Notes:


1. *The following instructions are for a Pen set with the original default settings and after performing the Training.*
2. *The Pen default is set to right-handed scanning. To change it to left-handed scanning, see Set Right/Left Handed on page 36.*
3. *For basic instructions on how to scan, see How to Scan on page 9.*

Before Starting: Turning the Pen on

The starting point for each of the following tutorials should be turning the Pen on, as following:

Task:

- Remove the protective cover from the Pen & press the power button to turn the Pen on.

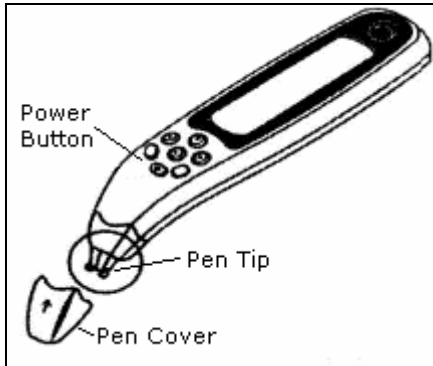

The Pen display will show:

Scan in English|
(press **ENT** for options)

Input Screen

Tutorial 1 - Scanning a Single Word

Step 1: Scan the word you wish to learn

Task:

- *Let's learn the word 'device':* From the following sentence, **only** scan the word 'device'. Place the Pen before the word and roll it over the word, using the arrows as guides for where to start and stop:

Roll the scanning device over printed words



Tip: If the scanning results displayed on the Pen are not accurate, simply scan again.

The Pen display will show:




The word 'device' in the main display of the **Large-Type Screen**

Note: the word will be read out loud.


Step 2: Hear the word read out loud


Task:

- Press  to hear the word spoken out loud.

Step 3: Hear the word spelled out loud

Task:

- Press  to hear the word spelled out.

Note: Press  if you wish to cancel the spelling out.

The Pen display will show:



Letters being spelled out in the **Large-Type Screen**

Note: Each letter is highlighted as it is spoken.

Step 4: View the syllable division of the word

Task:

- Press ◀ to view the syllable division of the word.

The Pen display will show:



Syllable breaks in the **Large-Type Screen**

Task:

- Press ▶ to return to the to the word 'device' in the main display of the Large-Type Screen.

The Pen display will show:



The word 'device' in the main display of the **Large-Type Screen**


Step 5: Translate the word into Spanish

(in the *Dictionary Screen*)

Task:

- Press ▲ to view the English→Spanish entry of the word in the Dictionary Screen.

The Pen display will show:

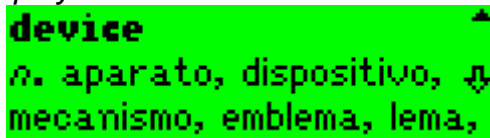

The *Spanish translation* of 'device' displayed in the **Dictionary Screen**

Tasks:

- Press ▼ to scroll through the entry.
- Press ◀ and ▶ to switch (toggle) the view back and

forth from the condensed display and the full display.
More Information: When the scroll arrow is hollow (↕) it means the display is condensed. When the scroll arrow is full (⇓) it means the display is full, showing all the available information for the scanned word.

- Press (▲) as many times as necessary in order to return to the word 'device' in the Large-Type Screen.

The Pen display will show:




The word 'device' in the main display of the **Large-Type Screen**

Step 6: View the English Definition of the word (in the *Dictionary Screen*)

Task:

- Press (▼) to view the English→English dictionary entry in the Dictionary Screen.

The Pen display will show:

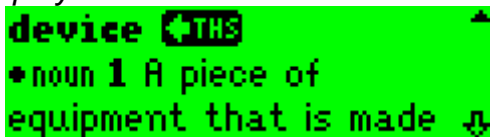

The *dictionary* entry of 'device' displayed in the **Dictionary Screen**



Tasks:


- Press (▼) and (▲) to scroll through the definitions of the dictionary entry.
- Press (▶) to switch the entry to the full display.
- Press (◀) to switch back to the condensed display.

Step 7: View synonyms of the word

Task:

The (THS) icon appearing at the top of English→English definition shows you that a Thesaurus entry is available and that you need to press (◀) to view it.

Note: If the  icon appears, it means that you are in the full display and you will need to press  twice to access the Thesaurus.

- Press  to view the thesaurus entry (from the *American Heritage Thesaurus*) for the same headword.



The Pen display will show:




device 
• noun
1  gadget, tool  


The *thesaurus* entry of 'device' displayed in the **Dictionary Screen**



Task:

The icon  appearing at the top of the screen shows you that you are currently in the Thesaurus and that you need to press  to return to the English→English definition (in the *American Heritage dictionary*).

- Press  to return to the dictionary entry (from the *American Heritage Dictionary*).

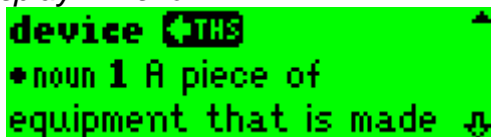The Pen display will show:




device 
• noun 1 A piece of
equipment that is made 


The dictionary entry of 'device' displayed in the **Dictionary Screen**



Step 8: Activate the Highlight Mode

Task:

- When viewing an entry in the Dictionary Screen, press  to activate the highlight mode.

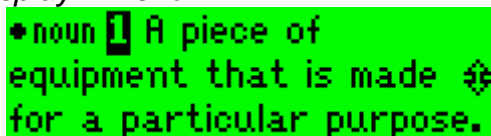The Pen display will show:



• noun  A piece of
equipment that is made 
for a particular purpose.

Highlight mode activated in the **Dictionary Screen**

Notes:

- You are now in highlight mode.
- Each highlighted word will be read out loud.


Step 9: Hear the sections read out loud

Task:

- When in highlight mode, *long-press* **ENT** (until the hourglass appears) in order to hear the whole section read out loud, word by word.

*Note: Press **ESC** if you wish to cancel the reading out.*

The Pen display will show:

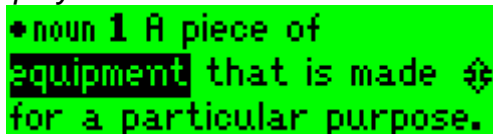

• noun 1 A piece of equipment that is made for a particular purpose.

The Pen is reading out loud the section in the **Dictionary Screen**

Note: Each word is highlighted as it is spoken. At the end, the highlight moves to the next section.

Task:


- When done reading out loud a section, *long-press* **ENT** if you want to hear the next section read out loud.

Step 10: Highlight one word in the entry

Task:

- When in highlight mode, use **◀**, **▶**, **▲** and **▼** to scroll through the words of the entry.

The Pen display will show:

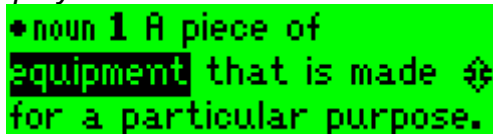


• noun 1 A piece of equipment that is made for a particular purpose.

The word 'equipment' is highlighted in the **Dictionary Screen**

Note: Each word you scroll to is highlighted and read out loud.

Step 11: Cross-Reference

Task:

- When a single word is highlighted, you can press  to learn it, too.

The Pen display will show:



The word 'equipment' in the **Large-Type Screen**


Note: You have activated a cross reference, and are now viewing the new word ('equipment').

Task:


- To further learn the word 'equipment' follow the procedures described above, from step 3 (page 16).

Step 12: Return from the Cross-Reference

Task:

- After learning the new word ('equipment'), press  to return to the word you cross referenced from ('device').

The Pen display will show:

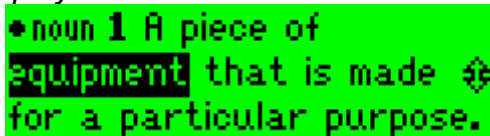

The word you cross referenced reappears in the **Dictionary Screen**

Tutorial 2 - Scanning a Whole Line

Step 1: Scan a line of printed text

Task:


- Scan the following sentence. Place the Pen before the first word and roll it over the text, using the arrows as guides for where to start and stop:

Roll the scanning device over printed words



Tip: If the scanning results displayed on the Pen are not accurate (meaning they do not match the text you wished to scan), simply scan again.

The Pen display will show:

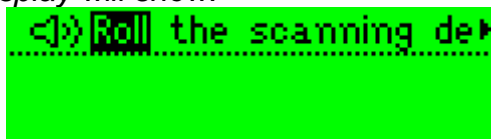

Word Selection Screen


Step 2: Hear the line read out loud

Task:

- Press to hear the line read out loud.

Note: Press if you wish to cancel the reading.

The Pen display will show:

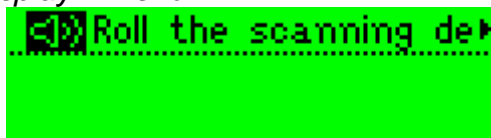

The speaker icon highlighted in the **Word Selection Screen**

Note: The whole line is read out loud. Each word is highlighted as it is spoken.

Task:


- When the speaker icon is highlighted, press to hear the line again.

Step 3: Choose a word

Task:

- Let's learn the word 'device'. Press to move along the sentence word by word until the word 'device' is highlighted.


The Pen display will show:

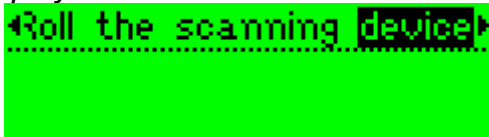


The word 'device' highlighted in the **Word Selection Screen**
Note: Each highlighted word is read out loud.

Step 4: View Dictionary Entry of the word (in the *Word Selection Screen*)

Task:



- Press  to view the English→English dictionary entry of the highlighted word, in the bottom part of the screen.

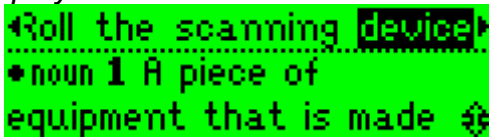The Pen display will show:




The English dictionary entry of 'device' displayed in the
Word Selection Screen

Task:

- Press  and  to scroll through the definitions of the dictionary entry.


The Pen display will show:

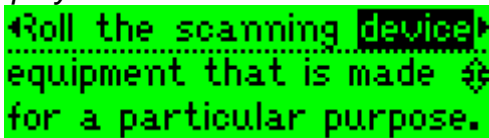

The dictionary entry of 'device' displayed in the
Word Selection Screen

Step 5: View the word in large font

Task:

- Press  to view the highlighted word in the Large-Type Screen.

The Pen display will show:



Large-Type Screen


To continue learning the word 'device', see step 3 onward, from Tutorial 1, on page 16.

Tutorial 3 - Words with Multiple Entries

Step 1: Scan a word (with multiple entries)

Task:

- Scan the word 'cat': place the Pen before the word and roll it over the text, using the arrows as guides for where to start and stop:

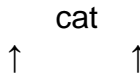

Tip: If the scanning results displayed on the Pen are not accurate, simply scan again.

The Pen display will show:




The word 'cat' in the main display of the **Large-Type Screen**

Note: the word will be read out loud.

Step 2: Translate the word into Spanish (in the Dictionary Screen)

Task:

- Press  to view the English→Spanish entry of the word in the Dictionary Screen.

The Pen display will show:




The English→Spanish dictionary's **Word List** for the word 'cat'

Tasks:

- Press (ENT) to select the highlighted suggestion 'cat¹'.

The Pen display will show:

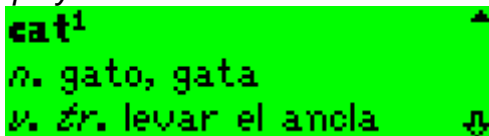

The Spanish translation of 'cat¹' displayed in the **Dictionary Screen**

Tasks:

- Press (ESC) to return to the Word List.
- Press (▼) to scroll down the list and highlight the second suggestion 'cat²'.

The Pen display will show:




The English→Spanish dictionary's **Word List** for the word 'cat'

Task:

- Press (ENT) to select the highlighted suggestion 'cat²'.

The Pen display will show:

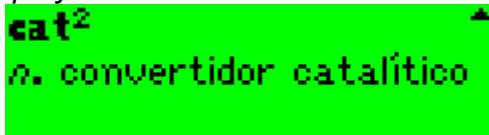

The Spanish translation of 'cat²' displayed in the **Dictionary Screen**

Task:

- Press (▲) to return to the word 'cat' in the Large-Type

Screen.

The Pen display will show:



The word 'cat' in the main display of the **Large-Type Screen**

Step 3: View the English Definition of the word (in the *Dictionary Screen*)

Task:

- Press **▼** to view the English→English dictionary entry in the Dictionary Screen.

The Pen display will show:




The English→English dictionary's **Word List** for the word 'cat'

Task:

- Press **ENT** to select the highlighted suggestion 'cat'.

The Pen display will show:

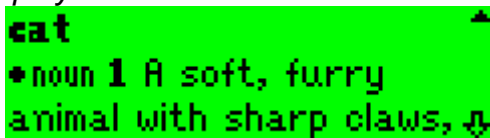

The definition of 'cat' displayed in the **Dictionary Screen**

Tasks:

- Press **ESC** to return to the Word List.
- Press **▼** to scroll down the list and highlight the second suggestion 'CAT'.

The Pen display will show:




The English→English dictionary's **Word List** for the word 'cat'

Task:

- Press **ENT** to select the highlighted suggestion 'CAT'.

The Pen display will show:

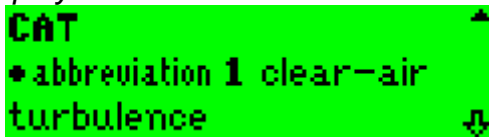

The English definition of 'CAT' displayed in the **Dictionary Screen**

Task:

- Press **▲** to display 'CAT' in the Large-Type Screen.

Note: If you wanted to return to the display of 'cat' (and not 'CAT'), you would need to first reselect the definition 'cat' from the Word List.



The Pen display will show:






The word 'CAT' in the main display of the **Large-Type Screen**

The Pen Screens

The Pen includes the following 4 major screens:
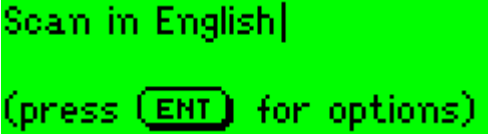
<p>The Input Screen</p> <p>This is the opening screen of the Pen. Just start scanning!</p> <p>If at any time you wish to return to this screen, simply press (ESC) as many times as necessary.</p>	 <p>Just scan a word or a line!</p>
<p>The Large-Type Screen</p> <p><u>This screen appears:</u></p> <ol style="list-style-type: none">1. After scanning a word2. After scanning a line – and selecting one word from the line.	 <p>The Large-Type Screen displaying the word 'device'</p> <p>See: Now you can really see what the word looks like! Nice and big! This will help you memorize it.</p> <p>Spell (▶): See, hear and learn how to spell the word by pressing (▶).</p> <p>Pronounce (ENT): Hear and learn how to pronounce the word by pressing (ENT).</p> <p>Syllables (◀):</p>

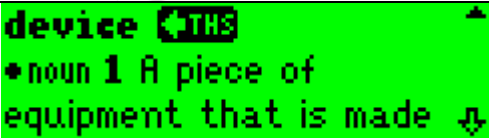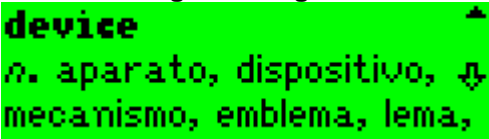	<p>See the syllables of the word by pressing ⏪.</p> <p>Translate ⏩:</p> <p>Translate the word into Spanish by pressing ⏩.</p> <p>Define and learn ⏴:</p> <p>Define the word (in English) and view its synonyms by first pressing ⏴.</p>
<p>The Dictionary Screen</p> <p>This screen is accessed from the Large-Type Screen:</p> <p>⏴ will show the dictionary screen of the English→English dictionary.</p> <p>⏩ will show the dictionary screen of the English→Spanish dictionary.</p>	 <p style="text-align: center;">English→English</p>  <p style="text-align: center;">English→Spanish</p> <p style="text-align: center;">Translate to Spanish.</p> <p style="text-align: center;">Define the word (in English) and understand its meaning.</p> <p style="text-align: center;">See how the word is used.</p> <p style="text-align: center;">Learn similar words.</p> <p>Have the Pen read out loud the English definitions. If you don't understand one of the words in the definition – just choose it to see its definition!</p>
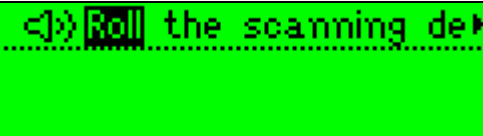
<p>The Word Selection Screen</p> <p>This screen appears after scanning a line (more than one word).</p>	 <p>The Word Selection Screen displaying the scanned line</p> <p>Hear the whole line read out loud to you by pressing ◀.</p> <p>Choose a word you don't understand (using ▶ and ◀) – and start learning it – the fun way!</p>
--	---

Menu Options

Accessing the Main Menu

To access the **Main Menu**:

1. Access the **Input Screen** (press **ESC** as many times as necessary)
2. Press **ENT** from the **Input Screen**.

Selecting a Menu Option

To select an option or to display a sub-menu:

1. In the **Main Menu**, scroll to the required option - until it is highlighted and press **ENT**.

Closing the Main Menu

To return to the **Input Screen**:

1. Press **ESC** as many times as necessary.

The Main Menu

The **Main Menu** contains the following options:

- Scanned Words
- Settings
- View Training

Scanned Words

The **Scanned Words** menu contains the following options:

- View History
- View Adjacent Entries
- Reset History

View History

This option displays a chronological list of the most recently displayed words, with the last word you defined appearing at the top of the list.

To review a word from the list:

1. Select the **View History** option.

Press **▲** and **▼** to scroll through the list of words until the word you are looking for is highlighted.

Press **ENT**.

The word appears in the **Large-Type Screen**.

Press **ESC** to return to the **History** list.

The **History** list can store up to 80 words. Once the list is full, the oldest word is deleted from the list to make room for the most recent one.

View Adjacent Entries





This option displays a list of all headwords in *The American Heritage Dictionary*.

Notes:

- *The list opens at the last word you looked up.*

- If the History list is empty, or if you haven't yet looked up a word during the current session, the list opens at the first word in the dictionary.





 
To learn a word from the list:

1. Select the **View Adjacent Entries** option.
2. Press  and  to scroll through the list until the word you are looking for is highlighted.
3. Press .
4. The word appears in the **Large-Type Screen**.
5. Press  to return to the **Adjacent Entries** list.

Reset History

This option will erase all entries from the History list.

To erase the History list:

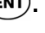1. Select the **Reset History** option.
2. The question 'Are you sure?' will appear.
 - To confirm - press .
 - To cancel – press  or press  to scroll to  and press .

Settings

The **Settings** menu contains the following options:

- Voice Settings
- Lock Dict. Access (*when dictionary not locked*)
- Unlock Dict. Access (*when dictionary locked*)
- Forgot your Password? (*when dictionary locked*)
- Highlight Spoken Words
- Word/Line Display First
- View Memory Status
- Set Right/Left Handed
- Set Contrast
- View Serial Number
- About

Voice Settings

The **Voice Settings** menu contains the following options:

- Set Volume
- Set Auto Speak On/Off
- Set Reading Speed

The Pen reads words out loud through its built-in speaker or through the earphones included in the package. You can adjust the volume, pitch and speed of the reading voice to suit your specific needs.

Set Volume

Use this option to adjust the volume level of the speaker.

To set the volume:

1. Select the **Set Volume** option.
2. The adjustment bar appears; adjust the volume level to the setting you want, using ▲ or ▼.
3. Press (ENT).

Set Auto Speak On/Off

Use this option to turn the Auto Speak feature on or off.

When Auto Speak is on, the Pen automatically reads out loud the word you select or highlight.

To set the Auto-Speak feature on or off:

1. Select the **Auto Speak On/Off** option.
2. The active option (the one currently set) appears with a check mark (✓).
3. Scroll to the required mode using ▲ or ▼ until it is highlighted.
4. Press (ENT) to select it.

Set Reading Speed

This option enables you to adjust the speed at which the words are spoken out loud by the Pen.

To set the reading speed:

1. Select the **Set Reading Speed** option.
2. Scroll to the speed you want by using ▲ or ▼. The higher the number, the faster the speed.
3. Press ENT.

Lock Dict. Access

Note: This option appears only when the dictionary is not locked.

Use this option to lock the access to the dictionary entries.

When the dictionary access is locked, the Pen will block access to the dictionary entries. You will still be able to scan text, hear the scanned words read out loud and view the words in large font.

To lock dictionary access:

1. Select the **Lock Dict. Access** option.
2. Set a 4-digit password by using the arrows:
 - ▲ and ▼ will scroll through 0-9
 - ◀ and ▶ will scroll between the digit positions.
3. Press ENT.

IMPORTANT: Write down the password you chose and save it aside. You will need it to unlock the dictionary!

4. Press ENT.

The dictionaries are now locked! A little key icon (🔑) appearing at the top right corner of the **Large-Type Display** indicates that the dictionary is locked. The ▲ and ▼ arrows will **not** show the dictionary entries for the displayed word.

Unlock Dict. Access

Note: This option appears only when the dictionary is locked.

Use this option to unlock the access to the dictionary entries (after having locked it).

To unlock dictionary access:

1. Select the **Unlock Dict. Access** option.

Enter the password (which you wrote down and saved aside!) by using the arrows:

- ▲ and ▼ will scroll through 0-9
- ◀ and ▶ will scroll between the digit positions.

2. Press (ENT).

The dictionaries are now unlocked!

Forgot your Password?

Note: This option appears only when the dictionary is locked.

If you want to unlock the dictionary – but you forgot the password – use this option to recover the lost code:

1. Select the **Forgot your Password?** option.
2. Send the **Recovery Code** that appears on the screen to our support team (see *Contact and Support Information* on page 4). They will tell you what your password is.
3. Once you have recovered the password, use the **Unlock Dict. Access** option to unlock the dictionary.

Highlight Spoken Words

Use this option to turn the Highlight Spoken Words feature on or off. When **Highlight Spoken Words** is on, the words are highlighted as they are read out loud and the screen progresses to display the highlighted word.

This is possible both in the **Word Selection Screen** when reading out the scanned line, or in the **Dictionary Screen** when reading out definitions.

To turn this option on or off:

1. Select the **Highlight Spoken Words** option.

2. The active option (the one currently set) appears with a check mark (✓).
3. Scroll to the mode you prefer by using (▲) or (▼), till it is highlighted.
4. Press (ENT).

Word/Line Display First

Use this option to set what is displayed on the screen - after scanning a line; whether only the first word from the line you scanned, or the whole line you scanned.

To set this option:

1. Select the **Word/Line Display First** option.
2. The active option (the one currently set) appears with a check mark (✓).
3. Scroll to the mode you prefer by using (▲) or (▼), till it is highlighted.
4. Press (ENT) to select it.

View Battery Status

In the **Settings** menu, select this option to check how much power is left in the batteries. A diagram displays the power level.

Set Right/Left Handed

Use this option to switch between right-handed scanning and left-handed scanning. Switching between these modes rotates the text on the display by 180°. The default is set to right-handed scanning.

To change the setting:

1. Select the **Set Right/Left Handed** option.
2. Scroll to the mode you prefer by using (▲) or (▼).
3. Press (ENT).

Set Contrast

Use this option to adjust the brightness of the display.

To set the display contrast:

1. Select the **Set Contrast** option.
2. The adjustment bar appears; Adjust the contrast using ◀ or ▶. The higher the number, the darker the display.
3. Press (ENT).

View Serial Number

Select this option to view the serial number of the Pen.

About

Select this option to view information about the Pen, the dictionaries and the text-to-speech software (used to read the words out loud).

View Training

Select this option to run the on-line training session provided on your Pen. This is the same training that appeared the first time you turned your Pen on.



Registration Card

Thank you for purchasing a WIZCOM product.

Please take a few minutes to fill in and return this card to us.

You can also register via our website: www.readingpen.com.

Serial Number: _____

Purchased from: _____

Purchase Date: ____/____/____

Personal Details:

First Name: _____ Last Name: _____

Address: _____

City: _____ State: _____

Zip/Postal Code: _____ Country: _____

Phone _____ Fax: _____

Email: _____

Sign up for updates

Mail this card or register electronically!

Visit our website at: www.readingpen.com for new product information, upgrades, customer support and more.

WizCom Technologies Inc. Tel: 888 777 0552; +1 978 7270026. Fax: +1 978 7270032.